



Round Shelving System Assembly

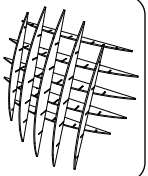


1

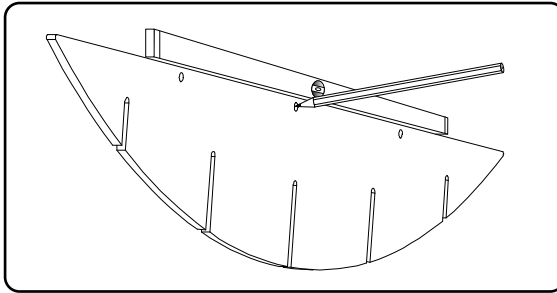

Take the pre-drilled part. Hold it flat on the wall, and poke a pen through the holes to mark the location of the screws.


2

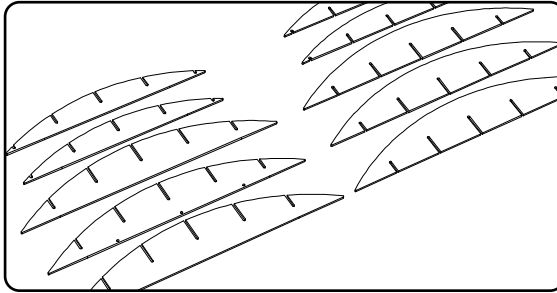

Lay the parts with slots on the curved edge on one side, and the ones with slots on the straight edge on the other.


You will be left with the 3 pieces used to flat-pack the CD Rack. These are not part of the assembly, and are not needed.

3

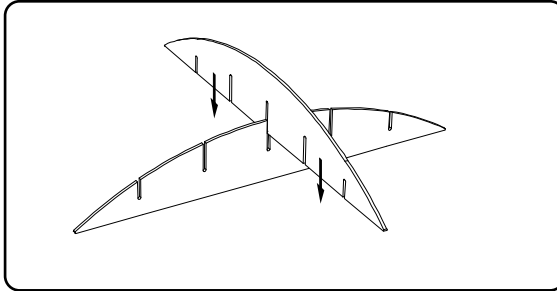


Start the assembly by slotting the two largest parts together. Use a flat surface to work on : table top or the floor.

4

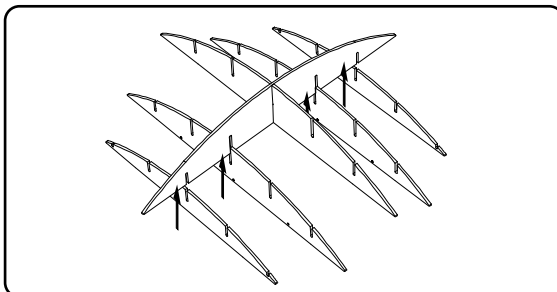

Working from below, slide in the parts with slots on the curved edge.


5

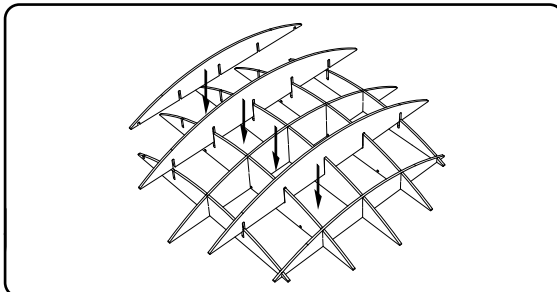

Working from above, slide in the parts with slots on the straight edge.

Keep all parts level and perpendicular to the surface.

6

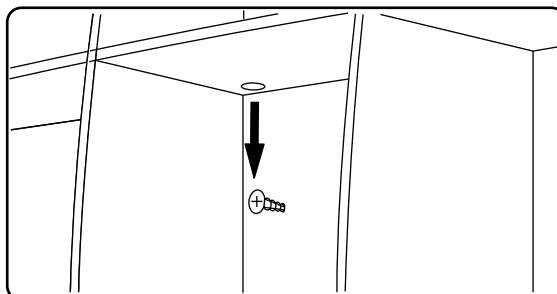

Drill the holes using a 5 mm drill bit for the provided wallplugs.

Leave the screws sticking out of wall by about 7mm (1/4"), so that the top edge of the screwhead fits into the hole. This prevents the shelf coming away from the wall.

Thank you for your purchase.